


TORO

EZReg™

*Adjustable pressure
regulator modules
EZR-30 and EZR-100*


Installation & Operating Instructions

© 1999 The Toro Company
Form Number 373-0026 Rev. A

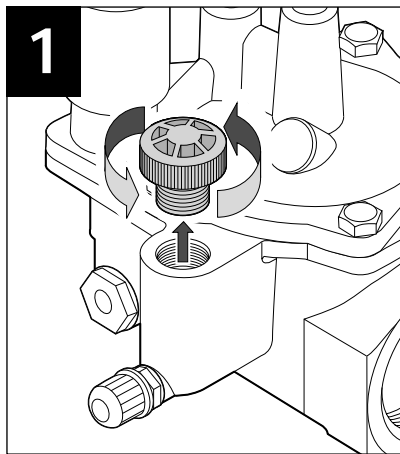


Note: During installation of the EZReg module, the irrigation valve can remain pressurized but should not be operated.


1. Remove the threaded plug from the regulator access port.

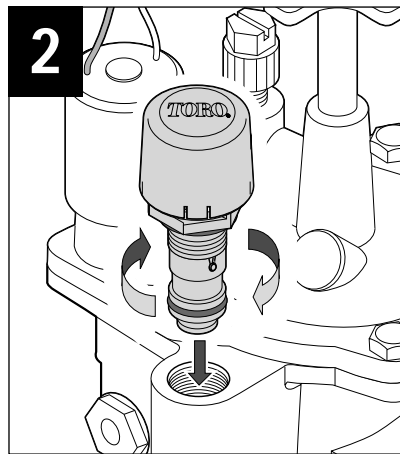

2. Install the EZReg module. Tighten 1/16 turn after the hexagonal flange contacts the valve body.

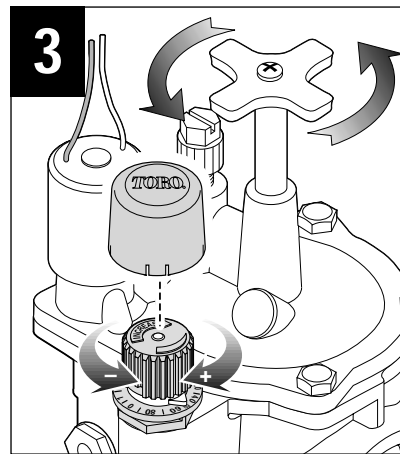

3. With the valve operating, turn the flow control handle to the left for maximum flow. Remove the regulator cover. Turn the knob left or right until the indicator aligns with the desired downstream pressure. Install the regulator cover when finished.

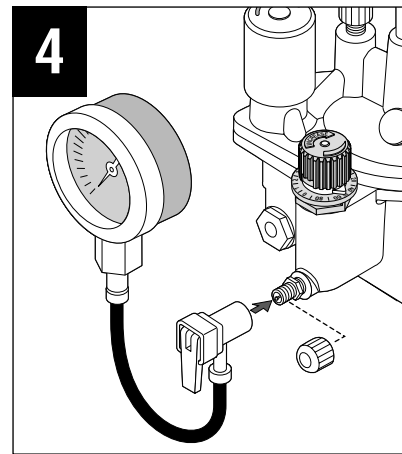

4. **Optional** – To verify downstream pressure, attach a Toro pressure gauge (model 995-51) to the test valve stem as shown. With the valve operating, read the indicated pressure on the gauge and adjust as necessary. Install the regulator cover when finished.